

### Commissioning of the heat press

- do not use a lifting device to remove the press from the box
- read the operating manual before commissioning
- use own power supply
- do not use extension cables and multiple plugs
- use the supplied power cable

### Maintenance of the press

#### Tips for low-maintenance operation

- observe maximum pressure setting
- cover sheet recommended to protect heat platen

### Daily maintenance work to be carried out

- checking the functions and settings
- do not continue to use the press if it is damaged or malfunctions, contact your dealer

### Weekly maintenance work to be carried out

- cleaning the surfaces of the press and the working area

### Monthly maintenance work to be carried out

- if the heat platen is dirty, clean it with the heat platen cleaner and heat eraser
- relubricate the pressure spindle with temperature-resistant lithium grease

### Annual maintenance work to be carried out

- relubricate exposed linkage
- check heat platen for cold spots, check calibration

---

#### Contact:

STAHL'S Asia • 8-79, Samseong 3-gil • Dongnam-gu • Cheonan-si • Chungcheongnam-do • Rep. of Korea  
Tel.: +82 41 622 0936  
www.stahlsasia.com • info@stahlsasia.com