## **MAINTENANCE**

# **HOTRONIX**® 360 IQ® HAT PRESS

### Commissioning of the heat press

- · do not use a lifting device to remove the press from the box
- · read the operating manual before commissioning
- · use own power supply
- · do not use extension cables and multiple plugs
- · use the supplied power cable

#### Maintenance of the heat press & compressor

Tips for low-maintenance operation

- Observe maximum pressure setting
- · cover sheet recommended to protect the heating plate

### Daily maintenance work to be carried out

- · checking the functions and settings
- · do not continue to use the press if it is damaged or malfunctions, contact your dealer

#### Weekly maintenance work to be carried out

· cleaning the surfaces of the press and the working area

#### Monthly maintenance work to be carried out

- if the heat platen is dirty, clean it with the heat platen cleaner and heat eraser
- · relubricate the pressure spindle with temperature-resistant lithium grease

#### Annual maintenance work to be carried out

- · relubricate exposed linkage
- · check heat platen for cold spots, check calibration

